


PRreset installation on windows 7

To install PRreset on Windows 7 it is necessary to be local administrator on the pc.

Install from the CD or download the software from www.prelectronics.com


Run setup and follow the instructions on the screen.

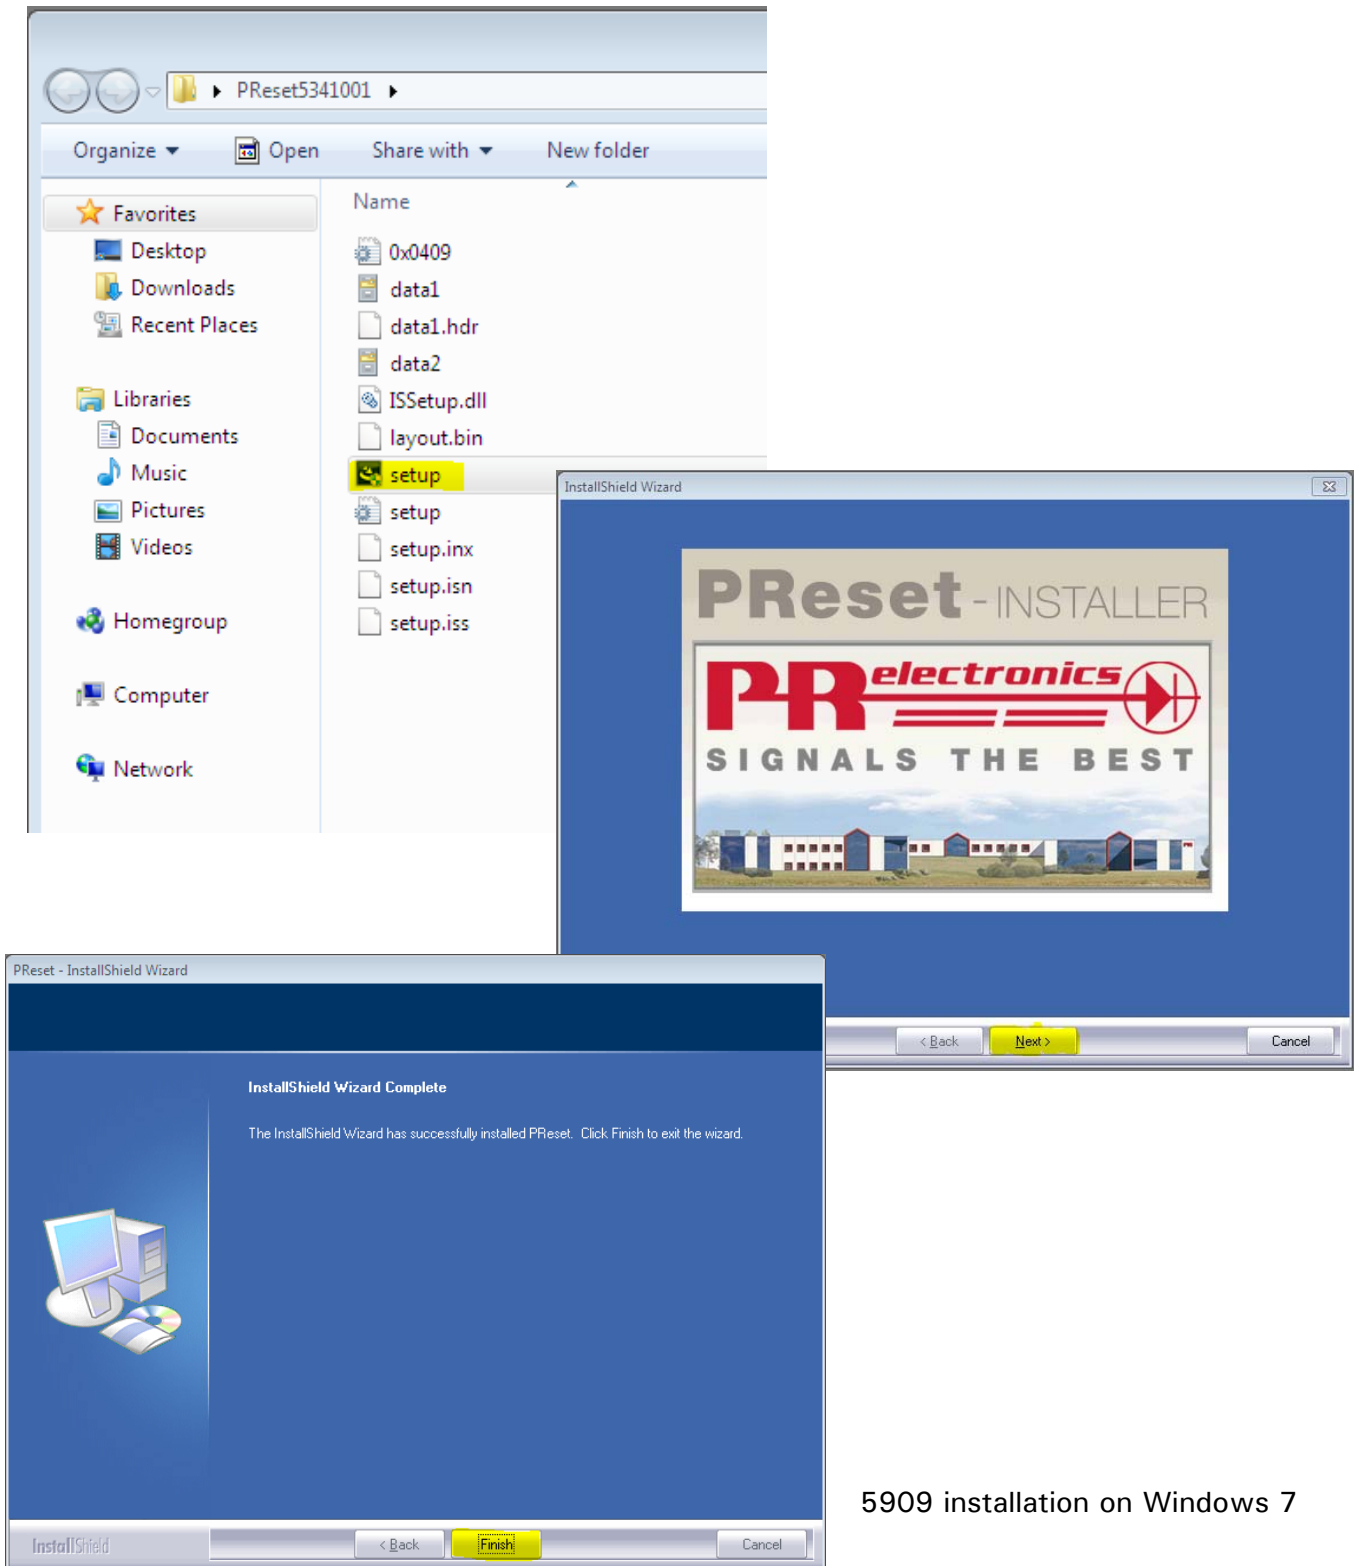


5909 installation on Windows 7

To install 5909 on Windows 7 it is necessary to be local administrator on the pc.

Connect your 5909 to a USB port on your machine. After a few seconds this windows will appear. Close this window

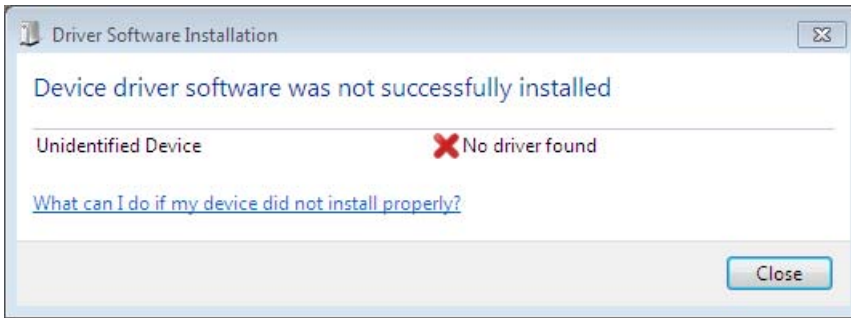


Go to Windows control panel and click on System and then Device manager

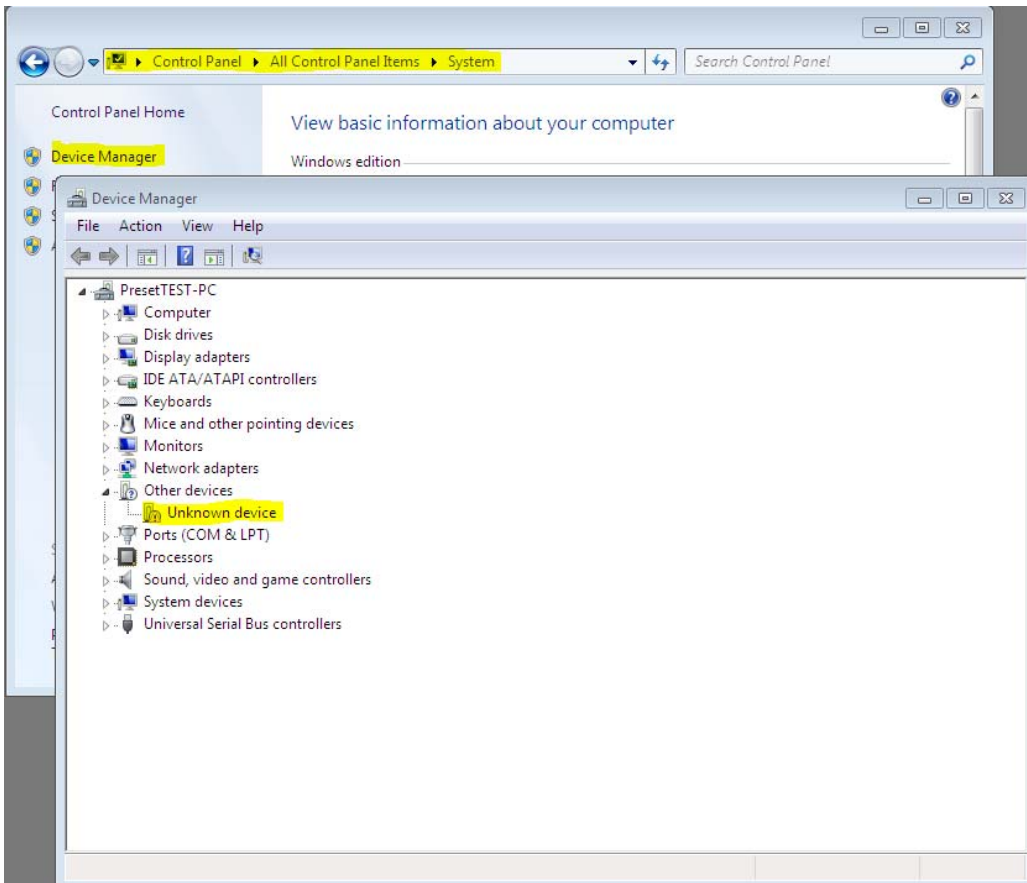


Right click on the Unknown device and click Update driver software.

Click Browse my Computer for driver software.

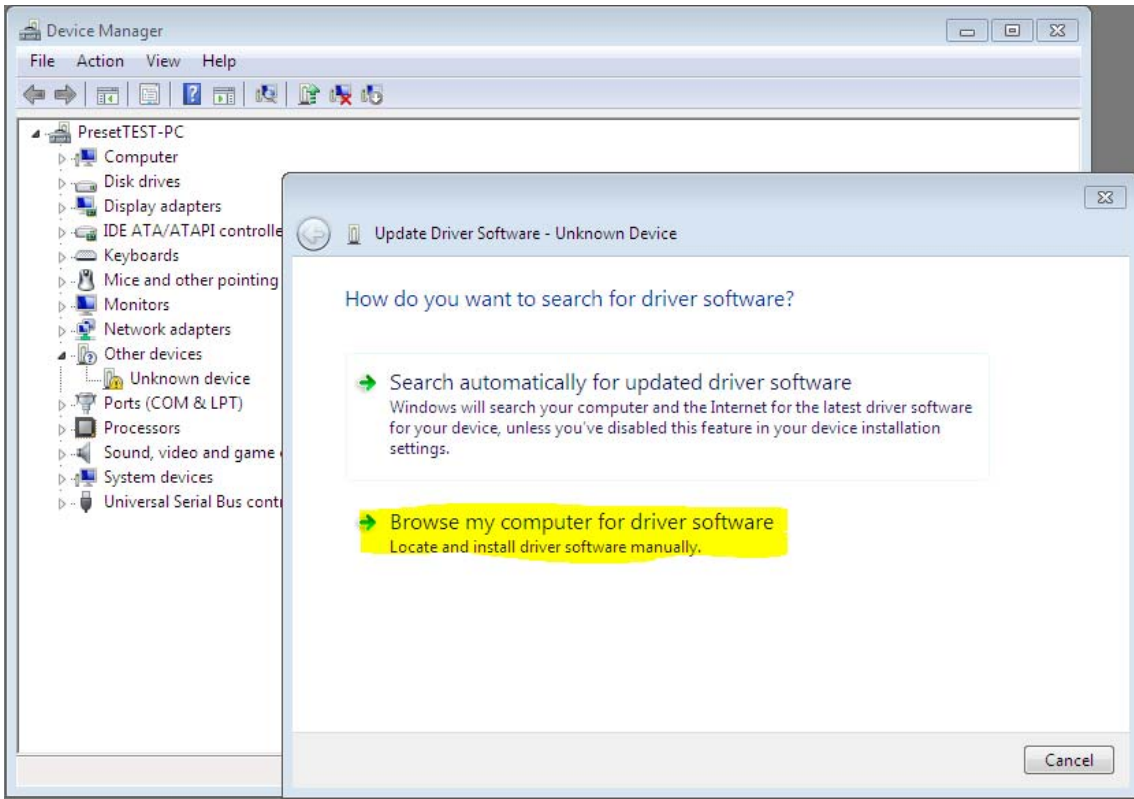


Browse to C:\Program files\PR electronics\Preset\Drivers


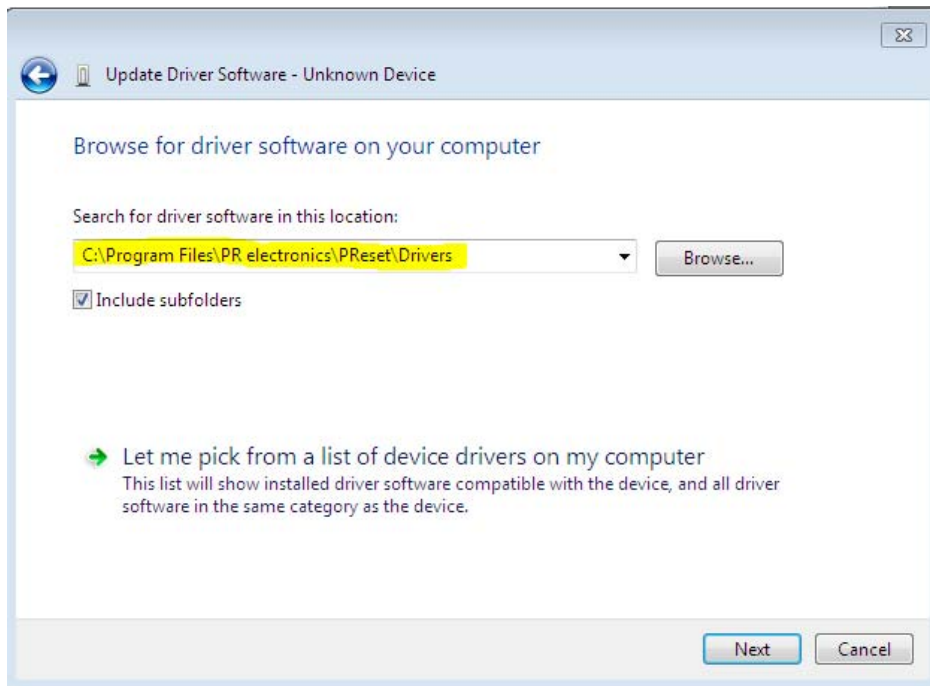


Click Next

This screen will appear, important to click install this driver anyway.

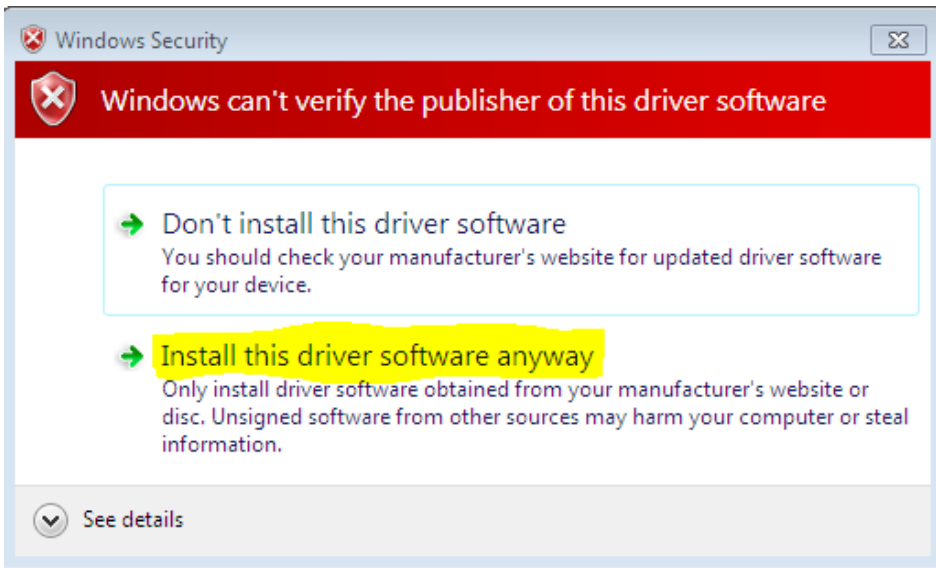


Now it will install the driver for your 5909

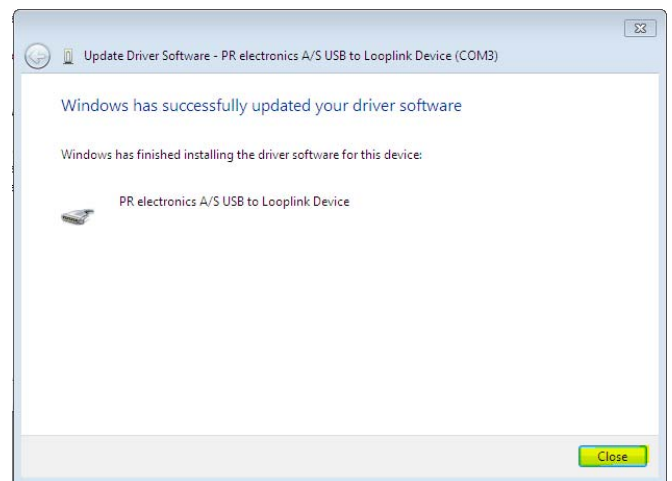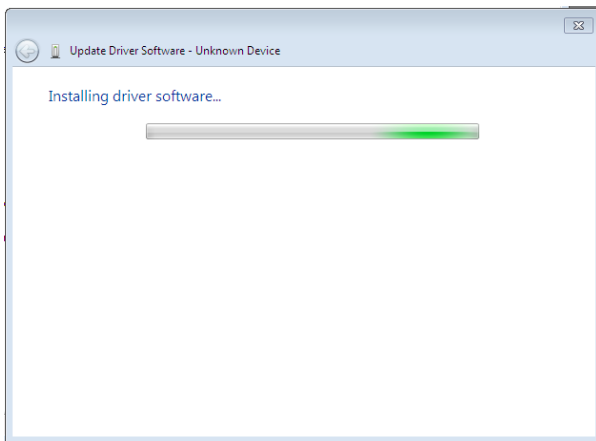


When you see this screen click close.


The installation of 5909 driver is complete!

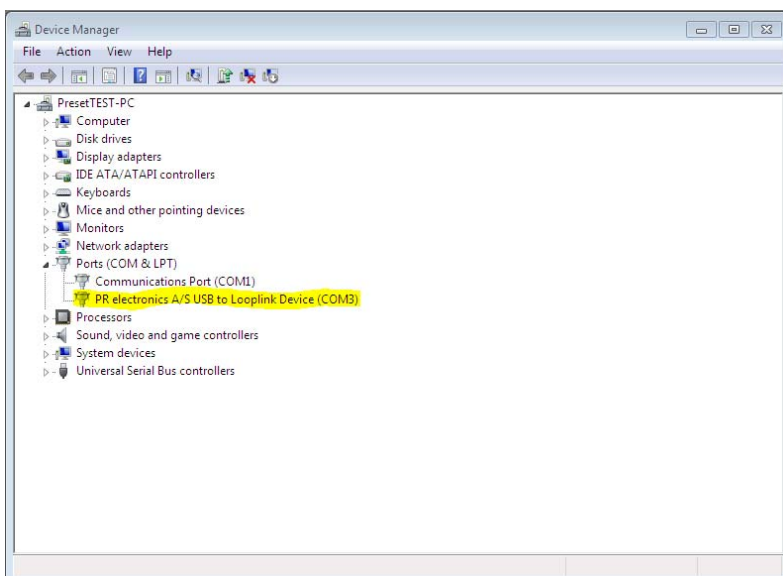

Start PReset and click Next 5909

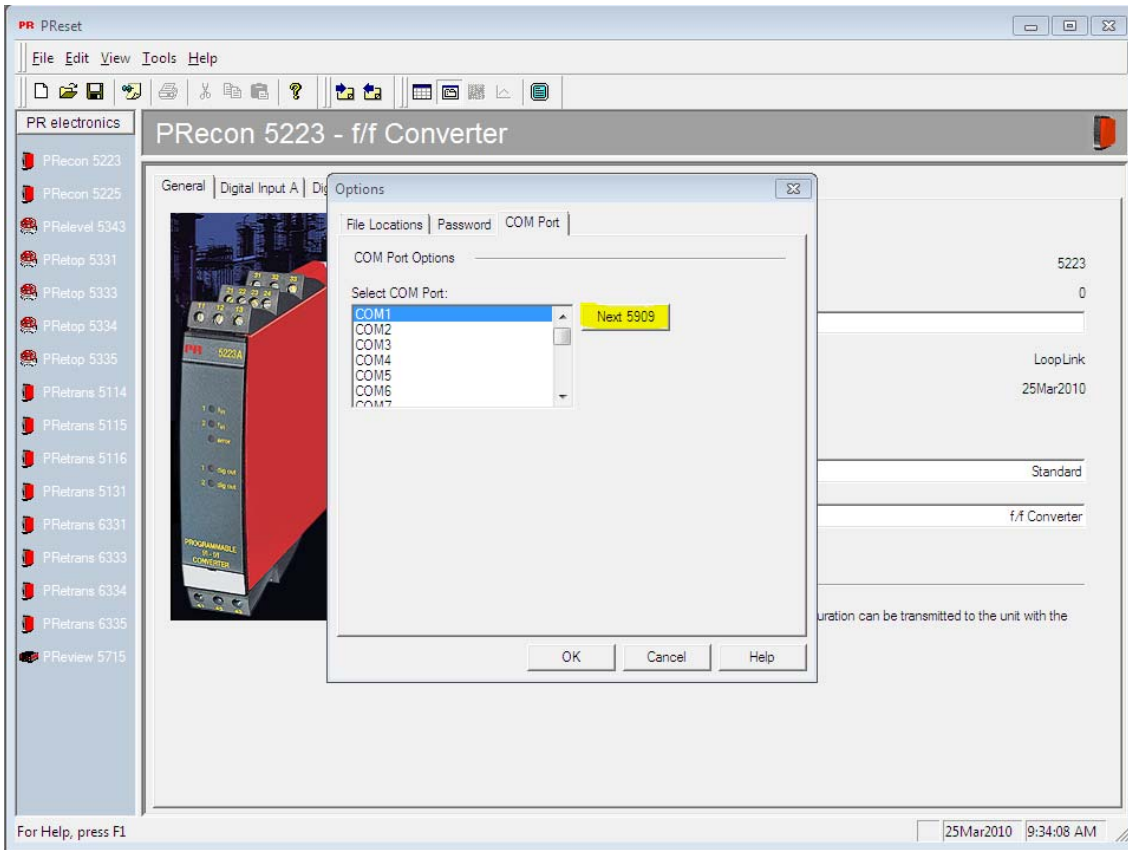

PReset now find your 5909 Click ok

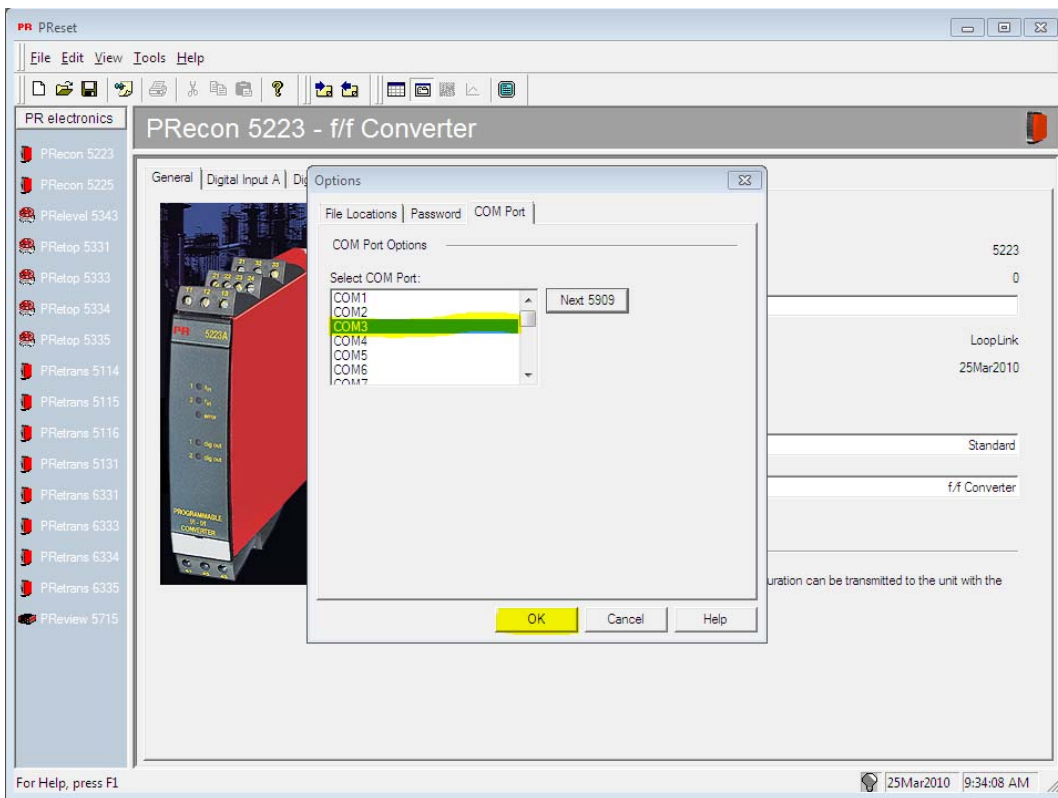

Now the installation of PReset and 5909 is complete.